Safety instructions

Important! Before commencing installation work disconnect the main cable from the power supply - remove fuse or turn switch to "OFF"!

1. Installation should be carried out in accordance with the local safety regulations.

2. In order to prevent damage, please check walls for cables before drilling holes.

3. Please ensure that all electrical connections (even preassembled lamps) are screwed tightly or are fully inserted as good contact is essential for a long life-span at high currents. Please check for tightconnecttions after changing or adjusting lamps. Screwed connections must be tightened after 20 minutes.

4. Please do not place objects on your system (e.g. for decorative purposes) if they were not delivered with the system.5. The lamps get very hot when in use. Please allow lamps to cool down before touching.

6. Do not change lamps or spots when switched on.


7. System should not be enlarged with additional lamps.8. We reserve the right to technical alterations.

Please keep these instructions.

Europe:Fitting: E14/G9 (Opal) - Voltage: 220-240VNorth America:Fitting: E12/G9 (Opal) - Voltage: 110-120VUse of a dimmer is highly recommended(Must be compatible with type of bulb.)The glass used for this lamp is hand-blown.Only 1st. quality has been chosen.Air bubbles and variations in thickness and colour is normal.

Anoli 3/6

Assembly Instructions

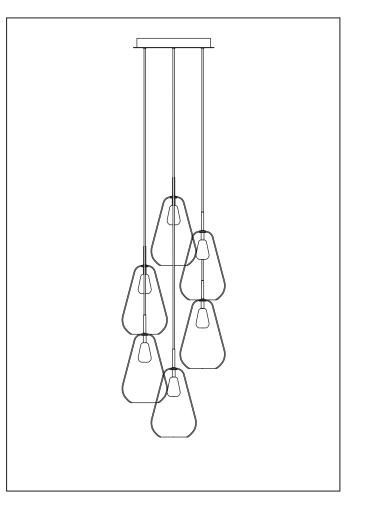


NUURA


www.nuura.com info@nuura.com CE

NUURA


© 2018 All rights reserved

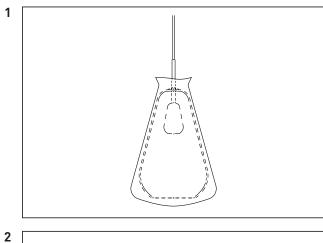


Please do not remove the pendant from its packeting until the pendants are securely attached to the mounted ceiling plate.





Please make sure it is fixated properly.



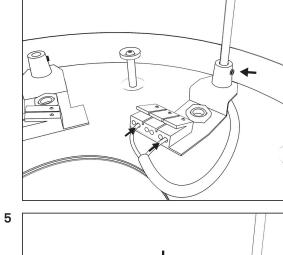

4

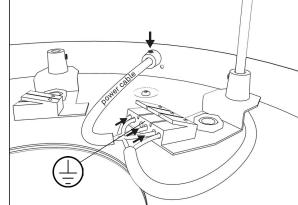

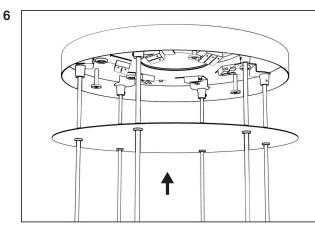

Lead the cables through the cable relief and fixate the cable by turning the screw clockwise.

Be sure to tighten the screw carefully.

Lead the wire-ends into the cable connector. Place the brown wire-end in one of the two holes in "L", place the blue wire-end in one of the two holes in "N"


۲

Lead the power cable into the ceiling plate and make sure the cable relief is thightened.


Connect the wire-ends to one of the cable connectors. Match the brown wire with "L" the blue wire with "N" and the green/yellow wire with the grounding symbol

Attach the cover plate to the ceiling plate by carefully sliding it up and let the magnets fixate the cover plate to the ceiling plate.

NB: Place your hands on the side or bottom of the cover plate, when sliding it up towards the ceiling plate.

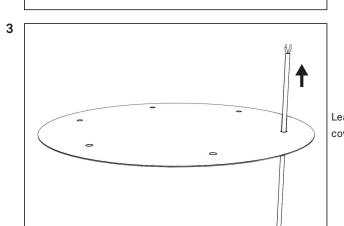

Formation Suggetions

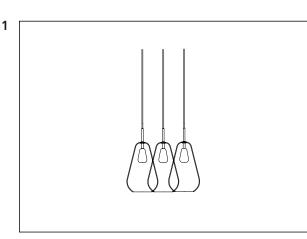


All cables are the same lenght: 250cm / 98,4 in

If same lenght is desired adjust each cable in same lenght.

Arrange the cables by numerical order if you want to make an arranged formation

If desired, adjust the lenght of the cables by shortening them.

NB. Cut off the same lenght of each cable for keeping the formation!

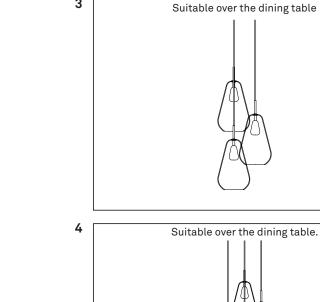

Suitable for stairs and hallways or corner.


Anoli 3 - Random formation 1 To adjust the cables in random formation, please adjust cables as in following length: 1:215cm / 84,6 in 2:235cm/84.6 in 3:250cm / 98,4 in Lead the wires in through the holes starting with nr.1. Place clockwise.

Anoli 6 - Random formation 1 To adjust the cables in random formation, please adjust cables as in following length: 1:250cm / 98,4 in 2:205cm / 80,7 in 3:235cm/92,5 in 4: 190cm / 74,8 in 5:220cm / 86,6 in 6:175cm/68,9 in

Lead the wires in through the holes starting with nr.1. Place clockwise.

Anoli 6 - Random formation 2 To adjust the cables in random formation, please adjust cables as in following length: 1:250cm / 98,4 in 2:130cm / 51,2 in 3:210cm / 82,7 in 4:90cm / 35,4 in 5:170cm / 66,9 in 6:50cm / 19,7 in Lead the wires in through the holes

starting with nr.1. Place clockwise.

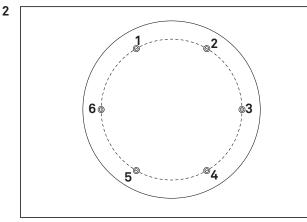

5

3